

To change the time on NEC ASPIRE or APIRE S

From an idle display telephone (usually x-301 or an operator position)

Press (SPKR)

Dial 828

Dial two digits for the hour in 24 hr format (00-24)

For example 13 = 1:00 P.M.

Dial two digits for the minutes (00-59)

You will hear confirmation tones.

Press (SPKR)

Daylight savings time adjustment for NEC Aspire or Aspire S.

This procedure requires access to system programming. This should be done at any idle telephone with a display. (Usually x-301 or an operator position) This procedure corrects for future day light savings adjustments as we know them.

From the phone:

Press (SPK)

Dial #*#* (You see Password in the display)

Dial 0000

Press (HOLD) (you see Program Mode)

Dial 10 (you see time and date setup)

Dial 24 (you see daylight savings)

Dial 03 (you see start month)

Dial 3

Press (HOLD) (you see start week)

Dial 2

Press (HOLD) twice (you see end month)

Dial 11(eleven)

Press (HOLD) (you see end week)

Dial 1

Press (HOLD) (you see end day of week)

Press (MSG) four times (you go back to Program Mode)

Press (Dial) (you see saving system data and phone exits program mode)